

6U Open VPX BACKPLANE BKP6-CEN10-11.2.4-4


VITA 46
VITA 65



Key figures:

- Compliant to VITA 46.0 baseline specification
- Compliant to VITA 65  , BKP6-CEN10-11.2.4-4
- 10 Slots VPX, 9 Payload Slots + 1 Switch Slot
- Data plane configuration: Dual Star x4 (2 FPs)
- Control plane configuration: Dual Star x1 (available to RTM)
- M3 studs for main voltage power entry
- PCB size 261.85 mm x 250.85mm x 5.4 mm
- 5 HP from slot to slot (25.40 mm) 1"
- Flexible keying and alignment mechanism
- with geographical address pins
- Reference clock
- Auxiliary clock
- System Reset
- With JTAG connector on first slot (JT1)
- System Management Interface on the backplane (I2CA, I2CB)
- Non-Volatile Memory Read Only signal set by Jumper BR1
- Battery backup option setting by Jumper XBAT for Vbat external or connected to 3.3 AUX.
- Max. Input current per backplane :
VS1:VS2:VS3 = 280A : 280A : 220A
- Operating temperature: -40° - +85°C
- Storage temperature: -55°C - +85°C
- Flammability rating: UL94-V0
- RoHS compliant
- Custom assembly or modification on request

Front side

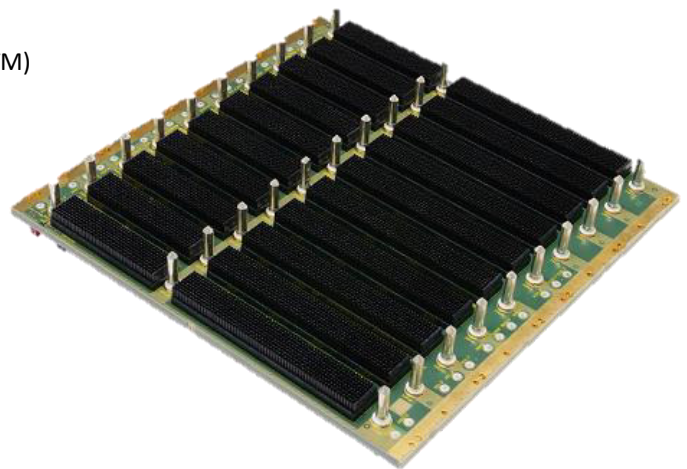

Rear side



▪ **Order number: B196910460**


6U Open VPX BACKPLANE
BKP6-CEN10-11.2.4-4

VITA 46
VITA 65




1) Topology: 10-Slot — BKP6-CEN10-11.2.4-4 (9 Payloads + 1 Switch)

Profile Payload slots: SLT6-PAY-4F1Q2U2T-10.2.1 / MOD6-PAY-4F1Q2U2T-12.2.1
Profile Switch slot: SLT6-SWH-20U19F-10.4.1

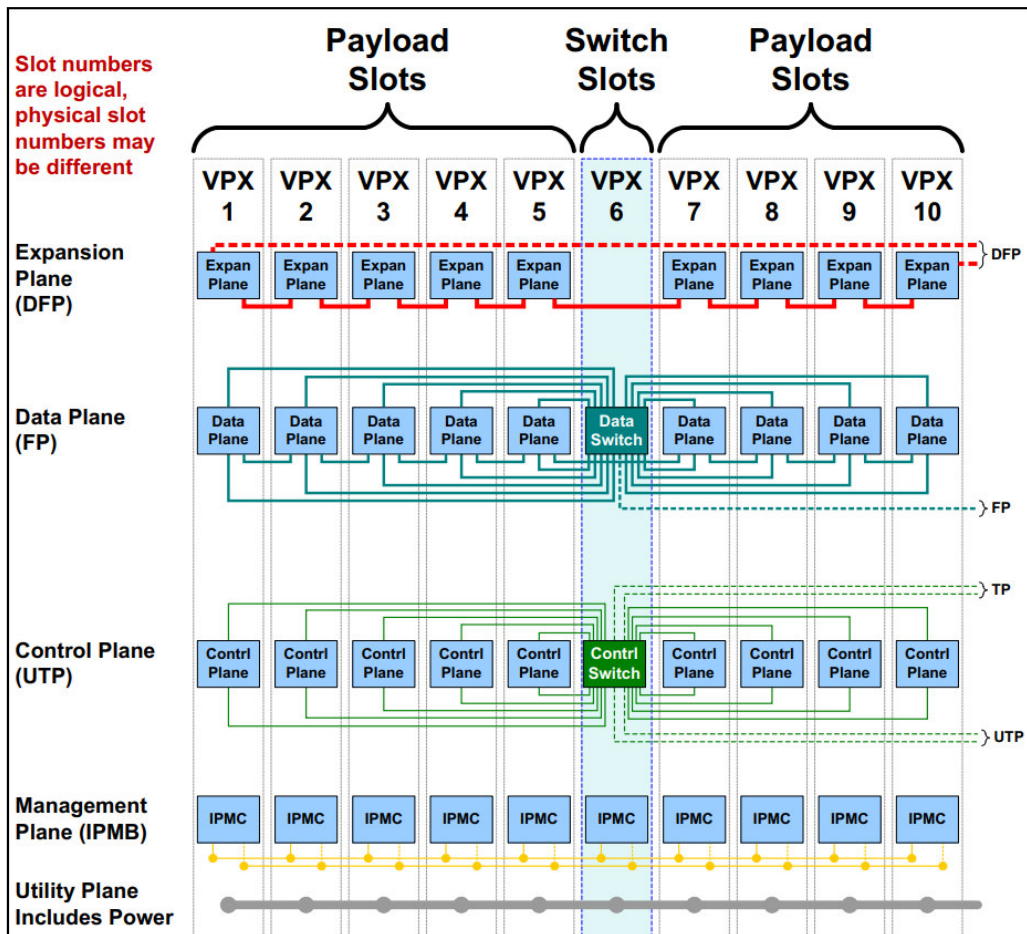

2) Expansion Plane Lanes

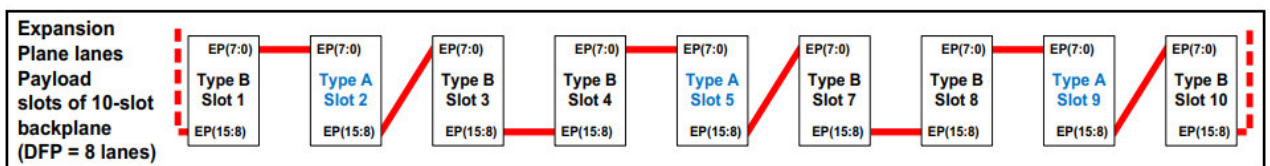


6U Open VPX BACKPLANE
BKP6-CEN10-11.2.4-4

VITA 46
VITA 65




3) Drawings

Front side

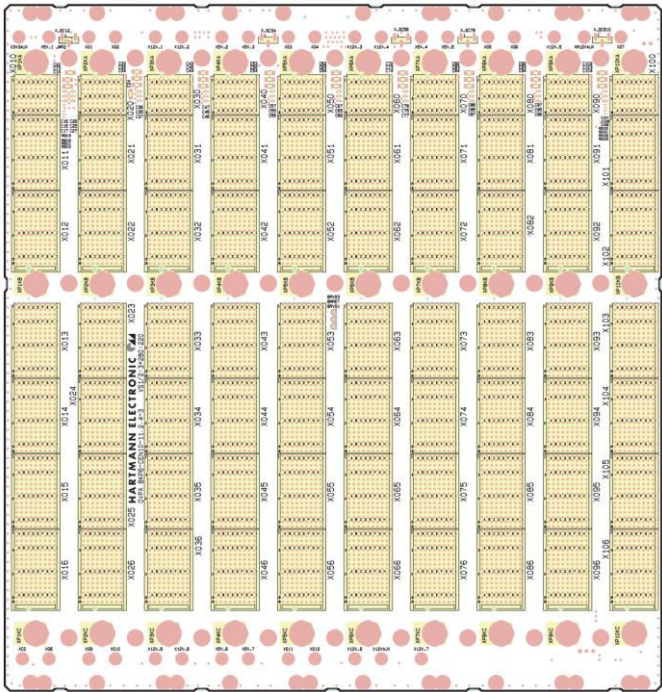

Back side

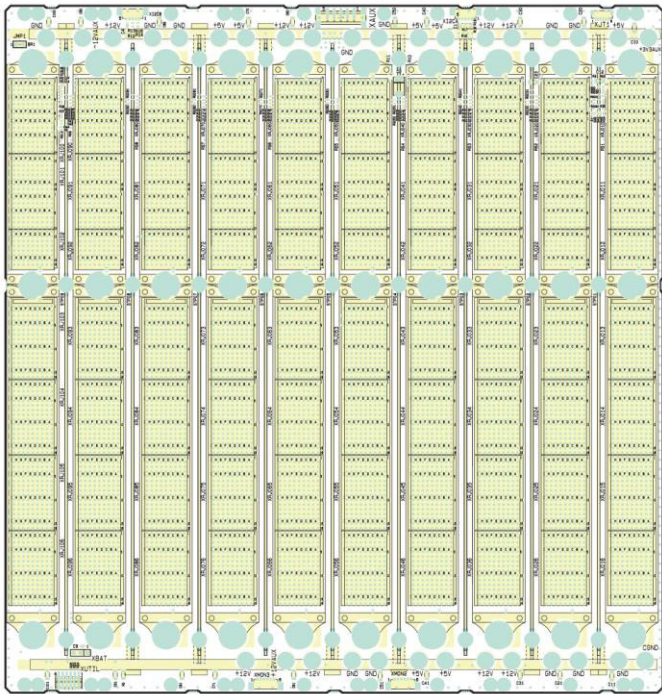

6U Open VPX BACKPLANE
BKP6-CEN10-11.2.4-4

VITA 46
VITA 65



4) Pin Assignment

Pin Assignment VPX J0 (Utility Connector)

	Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	Vs1	Vs1	Vs1	Vs1	No Pad*	Vs2	Vs2	Vs2	Vs2
2	Vs1	Vs1	Vs1	Vs1	No Pad*	Vs2	Vs2	Vs2	Vs2
3	Vs3	Vs3	Vs3	Vs3	No Pad*	Vs3	Vs3	Vs3	Vs3
4	GND	SM2	SM3	GND	-12V_Aux	GND	SYSRESET*	NVMRO	GND
5	GND	GAP*	GA4*	GND	3.3V_Aux	GND	SM0	SM1	GND
6	GND	GA3*	GA2*	GND	+12V_Aux	GND	GA1*	GA0*	GND
7	TCK	GND	GND	TDO	TDI	GND	GND	TMS	TRST*
8	GND	REF_CLK-	REF_CLK+	GND	GND	AUX_CLK-	AUX_CLK+	GND	GND

VS1=12V, VS2=12V, VS3=5V

Payload Slot Profile SLT6-PAY-4F1Q2U2T-10.2.1 — P1 & J1

Plug-In Module P1		Row G	Row F	Row E		Row D	Row C	Row B		Row A
				Even	Odd			Even	Odd	
Bplane J1		Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	Data Plane Port 1	GDiscrete1	GND	GND-J1	DP01-T0-	DP01-T0+	GND	GND-J1	DP01-R0-	DP01-R0+
2		GND	DP01-T1-	DP01-T1+	GND-J1	GND	DP01-R1-	DP01-R1+	GND-J1	GND
3		P1-VBAT	GND	GND-J1	DP01-T2-	DP01-T2+	GND	GND-J1	DP01-R2-	DP01-R2+
4		GND	DP01-T3-	DP01-T3+	GND-J1	GND	DP01-R3-	DP01-R3+	GND-J1	GND
5	Data Plane Port 2	SYS_CON*	GND	GND-J1	DP02-T0-	DP02-T0+	GND	GND-J1	DP02-R0-	DP02-R0+
6		GND	DP02-T1-	DP02-T1+	GND-J1	GND	DP02-R1-	DP02-R1+	GND-J1	GND
7		Reserved	GND	GND-J1	DP02-T2-	DP02-T2+	GND	GND-J1	DP02-R2-	DP02-R2+
8		GND	DP02-T3-	DP02-T3+	GND-J1	GND	DP02-R3-	DP02-R3+	GND-J1	GND
9	Data Plane Port 3	UD	GND	GND-J1	DP03-T0-	DP03-T0+	GND	GND-J1	DP03-R0-	DP03-R0+
10		GND	DP03-T1-	DP03-T1+	GND-J1	GND	DP03-R1-	DP03-R1+	GND-J1	GND
11		UD	GND	GND-J1	DP03-T2-	DP03-T2+	GND	GND-J1	DP03-R2-	DP03-R2+
12		GND	DP03-T3-	DP03-T3+	GND-J1	GND	DP03-R3-	DP03-R3+	GND-J1	GND
13	Data Plane Port 4	UD	GND	GND-J1	DP04-T0-	DP04-T0+	GND	GND-J1	DP04-R0-	DP04-R0+
14		GND	DP04-T1-	DP04-T1+	GND-J1	GND	DP04-R1-	DP04-R1+	GND-J1	GND
15		Maskable Reset*	GND	GND-J1	DP04-T2-	DP04-T2+	GND	GND-J1	DP04-R2-	DP04-R2+
16		GND	DP04-T3-	DP04-T3+	GND-J1	GND	DP04-R3-	DP04-R3+	GND-J1	GND

6U Open VPX BACKPLANE BKP6-CEN10-11.2.4-4

VITA 46
VITA 65



Payload Slot Profile SLT6-PAY-4F1Q2U2T-10.2.1 — P2 & J2

Plug-In Module P2	Row G	Row F	Row E		Row D	Row C	Row B		Row A
Backplane J2	Row i	Row h	Even	Odd	Row e	Row d	Even	Odd	Row a
1	UD	GND	GND-J2	EP00-T-	EP00-T+	GND	GND-J2	EP00-R-	EP00-R+
2	GND	EP01-T-	EP01-T+	GND-J2	GND	EP01-R-	EP01-R+	GND-J2	GND
3	UD	GND	GND-J2	EP02-T-	EP02-T+	GND	GND-J2	EP02-R-	EP02-R+
4	GND	EP03-T-	EP03-T+	GND-J2	GND	EP03-R-	EP03-R+	GND-J2	GND
5	UD	GND	GND-J2	EP04-T-	EP04-T+	GND	GND-J2	EP04-R-	EP04-R+
6	GND	EP05-T-	EP05-T+	GND-J2	GND	EP05-R-	EP05-R+	GND-J2	GND
7	UD	GND	GND-J2	EP06-T-	EP06-T+	GND	GND-J2	EP06-R-	EP06-R+
8	GND	EP07-T-	EP07-T+	GND-J2	GND	EP07-R-	EP07-R+	GND-J2	GND
9	UD	GND	GND-J2	EP08-T-	EP08-T+	GND	GND-J2	EP08-R-	EP08-R+
10	GND	EP09-T-	EP09-T+	GND-J2	GND	EP09-R-	EP09-R+	GND-J2	GND
11	UD	GND	GND-J2	EP10-T-	EP10-T+	GND	GND-J2	EP10-R-	EP10-R+
12	GND	EP11-T-	EP11-T+	GND-J2	GND	EP11-R-	EP11-R+	GND-J2	GND
13	UD	GND	GND-J2	EP12-T-	EP12-T+	GND	GND-J2	EP12-R-	EP12-R+
14	GND	EP13-T-	EP13-T+	GND-J2	GND	EP13-R-	EP13-R+	GND-J2	GND
15	UD	GND	GND-J2	EP14-T-	EP14-T+	GND	GND-J2	EP14-R-	EP14-R+
16	GND	EP15-T-	EP15-T+	GND-J2	GND	EP15-R-	EP15-R+	GND-J2	GND

Payload Slot Profile SLT6-PAY-4F1Q2U2T-10.2.2 — P3&J3, P5&J5, P6&J6

This connectors are all User Defined pins. See Section 6.3.3 for requirements and pin assignments concerning connectors that are all User Defined.

Backplane Jn	Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	UD	UD	UD	UD	UD	GND	UD	UD	UD
2	GND	UD	UD	GND	UD	UD	UD	UD	GND
3	UD	UD	UD	UD	UD	GND	UD	UD	UD
4	GND	UD	UD	GND	UD	UD	UD	UD	GND
5	UD	UD	UD	UD	UD	GND	UD	UD	UD
6	GND	UD	UD	GND	UD	UD	UD	UD	GND
7	UD	UD	UD	UD	UD	GND	UD	UD	UD
8	GND	UD	UD	GND	UD	UD	UD	UD	GND
9	UD	UD	UD	UD	UD	GND	UD	UD	UD
10	GND	UD	UD	GND	UD	UD	UD	UD	GND
11	UD	UD	UD	UD	UD	GND	UD	UD	UD
12	GND	UD	UD	GND	UD	UD	UD	UD	GND
13	UD	UD	UD	UD	UD	GND	UD	UD	UD
14	GND	UD	UD	GND	UD	UD	UD	UD	GND
15	UD	UD	UD	UD	UD	GND	UD	UD	UD
16	GND	UD	UD	GND	UD	UD	UD	UD	GND

6U Open VPX BACKPLANE

BKP6-CEN10-11.2.4-4

VITA 46
VITA 65



Payload Slot Profile SLT6-PAY-4F1Q2U2T-10.2.1 — P4 & J4

Plug-In Mod P4	Row G	Row F	Row E		Row D	Row C	Row B		Row A
Bplane J4	Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	UD	GND	GND-J4	UD	UD	GND	GND-J4	UD	UD
2	GND	UD	UD	GND-J4	GND	UD	UD	GND-J4	GND
3	UD	GND	GND-J4	UD	UD	GND	GND-J4	UD	UD
4	GND	UD	UD	GND-J4	GND	UD	UD	GND-J4	GND
5	UD	GND	GND-J4	UD	UD	GND	GND-J4	UD	UD
6	GND	UD	UD	GND-J4	GND	UD	UD	GND-J4	GND
7	UD	GND	GND-J4	UD	UD	GND	GND-J4	UD	UD
8	GND	UD	UD	GND-J4	GND	UD	UD	GND-J4	GND
9	UD	GND	GND-J4	UD	UD	GND	GND-J4	UD	UD
10	GND	UD	UD	GND-J4	GND	UD	UD	GND-J4	GND
11	UD	GND	GND-J4	CPUTp02-T-	CPUTp02-T+	GND	GND-J4	CPUTp02-R-	CPUTp02-R+
12	GND	CPUTp01-T-	CPUTp01-T+	GND-J4	GND	CPUTp01-R-	CPUTp01-R+	GND-J4	GND
13	UD	GND	GND-J4	CPTp02-DB-	CPTp02-DB+	GND	GND-J4	CPTp02-DA-	CPTp02-DA+
14	GND	CPTp02-DD-	CPTp02-DD+	GND-J4	GND	CPTp02-DC-	CPTp02-DC+	GND-J4	GND
15	UD	GND	GND-J4	CPTp01-DB-	CPTp01-DB+	GND	GND-J4	CPTp01-DA-	CPTp01-DA+
16	GND	CPTp01-DD-	CPTp01-DD+	GND-J4	GND	CPTp01-DC-	CPTp01-DC+	GND-J4	GND

Switch Slot Profile SLT6-SWH-20U19F-10.4.1 — P1 & J1

Plug-In Module P1	Row G	Row F	Row E		Row D	Row C	Row B		Row A
Bplane J1	Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	GDiscrete1	GND	GND-J1	CSutp01-T-	CSutp01-T+	GND	GND-J1	CSutp01-R-	CSutp01-R+
2	GND	CSutp02-T-	CSutp02-T+	GND-J1	GND	CSutp02-R-	CSutp02-R+	GND-J1	GND
3	P1-VBAT	GND	GND-J1	CSutp03-T-	CSutp03-T+	GND	GND-J1	CSutp03-R-	CSutp03-R+
4	GND	CSutp04-T-	CSutp04-T+	GND-J1	GND	CSutp04-R-	CSutp04-R+	GND-J1	GND
5	SYS_CON*	GND	GND-J1	CPUTp01-T-	CPUTp01-T+	GND	GND-J1	CPUTp01-R-	CPUTp01-R+
6	GND	CPUTp02-T-	CPUTp02-T+	GND-J1	GND	CPUTp02-R-	CPUTp02-R+	GND-J1	GND
7	Reserved	GND	GND-J1	CPUTp03-T-	CPUTp03-T+	GND	GND-J1	CPUTp03-R-	CPUTp03-R+
8	GND	CPUTp04-T-	CPUTp04-T+	GND-J1	GND	CPUTp04-R-	CPUTp04-R+	GND-J1	GND
9	UD	GND	GND-J1	CPUTp05-T-	CPUTp05-T+	GND	GND-J1	CPUTp05-R-	CPUTp05-R+
10	GND	CPUTp06-T-	CPUTp06-T+	GND-J1	GND	CPUTp06-R-	CPUTp06-R+	GND-J1	GND
11	UD	GND	GND-J1	CPUTp07-T-	CPUTp07-T+	GND	GND-J1	CPUTp07-R-	CPUTp07-R+
12	GND	CPUTp08-T-	CPUTp08-T+	GND-J1	GND	CPUTp08-R-	CPUTp08-R+	GND-J1	GND
13	UD	GND	GND-J1	CPUTp09-T-	CPUTp09-T+	GND	GND-J1	CPUTp09-R-	CPUTp09-R+
14	GND	CPUTp10-T-	CPUTp10-T+	GND-J1	GND	CPUTp10-R-	CPUTp10-R+	GND-J1	GND
15	Maskable Reset*	GND	GND-J1	CPUTp11-T-	CPUTp11-T+	GND	GND-J1	CPUTp11-R-	CPUTp11-R+
16	GND	CPUTp12-T-	CPUTp12-T+	GND-J1	GND	CPUTp12-R-	CPUTp12-R+	GND-J1	GND

6U Open VPX BACKPLANE
BKP6-CEN10-11.2.4-4

VITA 46
VITA 65



Switch Slot Profile SLT6-SWH-20U19F-10.4.1 — P2 & J2

Plug-In Module P2	Bplane J2	Row G	Row F	Row E		Row D	Row C	Row B		Row A
				Even	Odd			Even	Odd	
		Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	CPlane Pay- UTPs Ports 13 – 16	UD	GND	GND-J2	CPUTP13-T-	CPUTP13-T+	GND	GND-J2	CPUTP13-R-	CPUTP13-R+
2		GND	CPUTP14-T-	CPUTP14-T+	GND-J2	GND	CPUTP14-R-	CPUTP14-R+	GND-J2	GND
3		UD	GND	GND-J2	CPUTP15-T-	CPUTP15-T+	GND	GND-J2	CPUTP15-R-	CPUTP15-R+
4		GND	CPUTP16-T-	CPUTP16-T+	GND-J2	GND	CPUTP16-R-	CPUTP16-R+	GND-J2	GND
5	Data Plane Pay- load FP Port 15	UD	GND	GND-J2	DP15-T0-	DP15-T0+	GND	GND-J2	DP15-R0-	DP15-R0+
6		GND	DP15-T1-	DP15-T1+	GND-J2	GND	DP15-R1-	DP15-R1+	GND-J2	GND
7		UD	GND	GND-J2	DP15-T2-	DP15-T2+	GND	GND-J2	DP15-R2-	DP15-R2+
8		GND	DP15-T3-	DP15-T3+	GND-J2	GND	DP15-R3-	DP15-R3+	GND-J2	GND
9	Data Plane Pay- load FP Port 14	UD	GND	GND-J2	DP14-T0-	DP14-T0+	GND	GND-J2	DP14-R0-	DP14-R0+
10		GND	DP14-T1-	DP14-T1+	GND-J2	GND	DP14-R1-	DP14-R1+	GND-J2	GND
11		UD	GND	GND-J2	DP14-T2-	DP14-T2+	GND	GND-J2	DP14-R2-	DP14-R2+
12		GND	DP14-T3-	DP14-T3+	GND-J2	GND	DP14-R3-	DP14-R3+	GND-J2	GND
13	Data Plane Pay- load FP Port 13	UD	GND	GND-J2	DP13-T0-	DP13-T0+	GND	GND-J2	DP13-R0-	DP13-R0+
14		GND	DP13-T1-	DP13-T1+	GND-J2	GND	DP13-R1-	DP13-R1+	GND-J2	GND
15		UD	GND	GND-J2	DP13-T2-	DP13-T2+	GND	GND-J2	DP13-R2-	DP13-R2+
16		GND	DP13-T3-	DP13-T3+	GND-J2	GND	DP13-R3-	DP13-R3+	GND-J2	GND

Switch Slot Profile SLT6-SWH-20U19F-10.4.1 — P3 & J3

Plug-In Module P3	Bplane J3	Row G	Row F	Row E		Row D	Row C	Row B		Row A
				Even	Odd			Even	Odd	
		Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	Data Plane Pay- load FP Port 12	UD	GND	GND-J3	DP12-T0-	DP12-T0+	GND	GND-J3	DP12-R0-	DP12-R0+
2		GND	DP12-T1-	DP12-T1+	GND-J3	GND	DP12-R1-	DP12-R1+	GND-J3	GND
3		UD	GND	GND-J3	DP12-T2-	DP12-T2+	GND	GND-J3	DP12-R2-	DP12-R2+
4		GND	DP12-T3-	DP12-T3+	GND-J3	GND	DP12-R3-	DP12-R3+	GND-J3	GND
5	Data Plane Pay- load FP Port 11	UD	GND	GND-J3	DP11-T0-	DP11-T0+	GND	GND-J3	DP11-R0-	DP11-R0+
6		GND	DP11-T1-	DP11-T1+	GND-J3	GND	DP11-R1-	DP11-R1+	GND-J3	GND
7		UD	GND	GND-J3	DP11-T2-	DP11-T2+	GND	GND-J3	DP11-R2-	DP11-R2+
8		GND	DP11-T3-	DP11-T3+	GND-J3	GND	DP11-R3-	DP11-R3+	GND-J3	GND
9	Data Plane Pay- load FP Port 10	UD	GND	GND-J3	DP10-T0-	DP10-T0+	GND	GND-J3	DP10-R0-	DP10-R0+
10		GND	DP10-T1-	DP10-T1+	GND-J3	GND	DP10-R1-	DP10-R1+	GND-J3	GND
11		UD	GND	GND-J3	DP10-T2-	DP10-T2+	GND	GND-J3	DP10-R2-	DP10-R2+
12		GND	DP10-T3-	DP10-T3+	GND-J3	GND	DP10-R3-	DP10-R3+	GND-J3	GND
13	Data Plane Pay- load FP Port 9	UD	GND	GND-J3	DP09-T0-	DP09-T0+	GND	GND-J3	DP09-R0-	DP09-R0+
14		GND	DP09-T1-	DP09-T1+	GND-J3	GND	DP09-R1-	DP09-R1+	GND-J3	GND
15		UD	GND	GND-J3	DP09-T2-	DP09-T2+	GND	GND-J3	DP09-R2-	DP09-R2+
16		GND	DP09-T3-	DP09-T3+	GND-J3	GND	DP09-R3-	DP09-R3+	GND-J3	GND

6U Open VPX BACKPLANE

BKP6-CEN10-11.2.4-4

VITA 46
VITA 65



Switch Slot Profile SLT6-SWH-20U19F-10.4.1 — P4 & J4

Plug-In Module P4	Row G	Row F	Row E		Row D	Row C	Row B		Row A
Bplane J4	Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	UD	GND	GND-J4	DP08-T0-	DP08-T0+	GND	GND-J4	DP08-R0-	DP08-R0+
2	GND	DP08-T1-	DP08-T1+	GND-J4	GND	DP08-R1-	DP08-R1+	GND-J4	GND
3	UD	GND	GND-J4	DP08-T2-	DP08-T2+	GND	GND-J4	DP08-R2-	DP08-R2+
4	GND	DP08-T3-	DP08-T3+	GND-J4	GND	DP08-R3-	DP08-R3+	GND-J4	GND
5	UD	GND	GND-J4	DP07-T0-	DP07-T0+	GND	GND-J4	DP07-R0-	DP07-R0+
6	GND	DP07-T1-	DP07-T1+	GND-J4	GND	DP07-R1-	DP07-R1+	GND-J4	GND
7	UD	GND	GND-J4	DP07-T2-	DP07-T2+	GND	GND-J4	DP07-R2-	DP07-R2+
8	GND	DP07-T3-	DP07-T3+	GND-J4	GND	DP07-R3-	DP07-R3+	GND-J4	GND
9	UD	GND	GND-J4	DP06-T0-	DP06-T0+	GND	GND-J4	DP06-R0-	DP06-R0+
10	GND	DP06-T1-	DP06-T1+	GND-J4	GND	DP06-R1-	DP06-R1+	GND-J4	GND
11	UD	GND	GND-J4	DP06-T2-	DP06-T2+	GND	GND-J4	DP06-R2-	DP06-R2+
12	GND	DP06-T3-	DP06-T3+	GND-J4	GND	DP06-R3-	DP06-R3+	GND-J4	GND
13	UD	GND	GND-J4	DP05-T0-	DP05-T0+	GND	GND-J4	DP05-R0-	DP05-R0+
14	GND	DP05-T1-	DP05-T1+	GND-J4	GND	DP05-R1-	DP05-R1+	GND-J4	GND
15	UD	GND	GND-J4	DP05-T2-	DP05-T2+	GND	GND-J4	DP05-R2-	DP05-R2+
16	GND	DP05-T3-	DP05-T3+	GND-J4	GND	DP05-R3-	DP05-R3+	GND-J4	GND

Switch Slot Profile SLT6-SWH-20U19F-10.4.1 — P5 & J5

Plug-In Module P5	Row G	Row F	Row E		Row D	Row C	Row B		Row A
Bplane J5	Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	UD	GND	GND-J5	DP04-T0-	DP04-T0+	GND	GND-J5	DP04-R0-	DP04-R0+
2	GND	DP04-T1-	DP04-T1+	GND-J5	GND	DP04-R1-	DP04-R1+	GND-J5	GND
3	UD	GND	GND-J5	DP04-T2-	DP04-T2+	GND	GND-J5	DP04-R2-	DP04-R2+
4	GND	DP04-T3-	DP04-T3+	GND-J5	GND	DP04-R3-	DP04-R3+	GND-J5	GND
5	UD	GND	GND-J5	DP03-T0-	DP03-T0+	GND	GND-J5	DP03-R0-	DP03-R0+
6	GND	DP03-T1-	DP03-T1+	GND-J5	GND	DP03-R1-	DP03-R1+	GND-J5	GND
7	UD	GND	GND-J5	DP03-T2-	DP03-T2+	GND	GND-J5	DP03-R2-	DP03-R2+
8	GND	DP03-T3-	DP03-T3+	GND-J5	GND	DP03-R3-	DP03-R3+	GND-J5	GND
9	UD	GND	GND-J5	DP02-T0-	DP02-T0+	GND	GND-J5	DP02-R0-	DP02-R0+
10	GND	DP02-T1-	DP02-T1+	GND-J5	GND	DP02-R1-	DP02-R1+	GND-J5	GND
11	UD	GND	GND-J5	DP02-T2-	DP02-T2+	GND	GND-J5	DP02-R2-	DP02-R2+
12	GND	DP02-T3-	DP02-T3+	GND-J5	GND	DP02-R3-	DP02-R3+	GND-J5	GND
13	UD	GND	GND-J5	DP01-T0-	DP01-T0+	GND	GND-J5	DP01-R0-	DP01-R0+
14	GND	DP01-T1-	DP01-T1+	GND-J5	GND	DP01-R1-	DP01-R1+	GND-J5	GND
15	UD	GND	GND-J5	DP01-T2-	DP01-T2+	GND	GND-J5	DP01-R2-	DP01-R2+
16	GND	DP01-T3-	DP01-T3+	GND-J5	GND	DP01-R3-	DP01-R3+	GND-J5	GND

6U Open VPX BACKPLANE
BKP6-CEN10-11.2.4-4

VITA 46
VITA 65





Switch Slot Profile SLT6-SWH-20U19F-10.4.1 — P6 & J6

Plug-In Module P6	Row G	Row F	Row E		Row D	Row C	Row B		Row A
Bplane J6	Row i	Row h	Row g	Row f	Row e	Row d	Row c	Row b	Row a
1	UD	GND	GND-J6	DS04-T0-	DS04-T0+	GND	GND-J6	DS04-R0-	DS04-R0+
2	GND	DS04-T1-	DS04-T1+	GND-J6	GND	DS04-R1-	DS04-R1+	GND-J6	GND
3	UD	GND	GND-J6	DS04-T2-	DS04-T2+	GND	GND-J6	DS04-R2-	DS04-R2+
4	GND	DS04-T3-	DS04-T3+	GND-J6	GND	DS04-R3-	DS04-R3+	GND-J6	GND
5	UD	GND	GND-J6	DS03-T0-	DS03-T0+	GND	GND-J6	DS03-R0-	DS03-R0+
6	GND	DS03-T1-	DS03-T1+	GND-J6	GND	DS03-R1-	DS03-R1+	GND-J6	GND
7	UD	GND	GND-J6	DS03-T2-	DS03-T2+	GND	GND-J6	DS03-R2-	DS03-R2+
8	GND	DS03-T3-	DS03-T3+	GND-J6	GND	DS03-R3-	DS03-R3+	GND-J6	GND
9	UD	GND	GND-J6	DS02-T0-	DS02-T0+	GND	GND-J6	DS02-R0-	DS02-R0+
10	GND	DS02-T1-	DS02-T1+	GND-J6	GND	DS02-R1-	DS02-R1+	GND-J6	GND
11	UD	GND	GND-J6	DS02-T2-	DS02-T2+	GND	GND-J6	DS02-R2-	DS02-R2+
12	GND	DS02-T3-	DS02-T3+	GND-J6	GND	DS02-R3-	DS02-R3+	GND-J6	GND
13	UD	GND	GND-J6	DS01-T0-	DS01-T0+	GND	GND-J6	DS01-R0-	DS01-R0+
14	GND	DS01-T1-	DS01-T1+	GND-J6	GND	DS01-R1-	DS01-R1+	GND-J6	GND
15	UD	GND	GND-J6	DS01-T2-	DS01-T2+	GND	GND-J6	DS01-R2-	DS01-R2+
16	GND	DS01-T3-	DS01-T3+	GND-J6	GND	DS01-R3-	DS01-R3+	GND-J6	GND

5) Current Capability:

■ +12V	280 A
■ +12V	280 A
■ +5V	220 A
■ -12V AUX	12 A
■ +12V AUX	12 A
■ +3.3V AUX	12 A

6) UTILITY (Connector XUTIL)

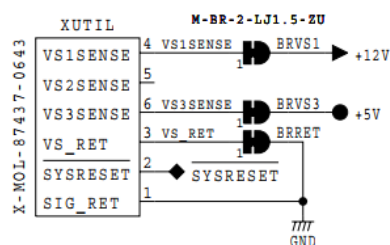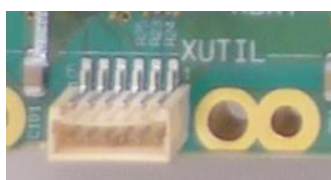


Connector Molex 87437-0643

Pinout diagram for XJT1 JTAG connector:

Pin	Signal
1	GND
2	TCK
3	TMS
4	TRST
5	TDI
6	TDO

1	SYSCON1
2	GND
3	SYSCON2

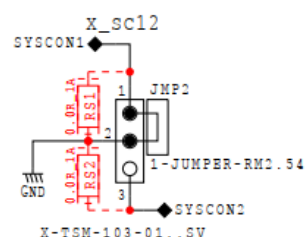

1	I2CA_SCL
2	GND
3	I2CA_SDA
4	I2CA_PWR
5	NC

1	I2CB_SCL
2	GND
3	I2CB_SDA
4	I2CB_PWR
5	NC

6U Open VPX BACKPLANE
BKP6-CEN10-11.2.4-4

VITA 46
VITA 65



10) Power Studs M3

The main operating voltages (+12V, +5V) and GND are supplied with M3 screw terminals. The auxiliary operating voltages are supplied via M3 screw terminals. Optimal daughter board supply and trouble-free operation are ensured by the arrangement of the feed modules on the backplane.




11) XBAT

Normally a battery voltage with approximately 3V is available at Pin VBAT of connector VPX-J1. The voltage is externally accessible with connector XBAT, Pin2 or internally using 3.3V_AUX by setting a Jumper between Pin2 and Pin3.

XBAT

1	GND
2	+VBAT
3	+3.3V_AUX

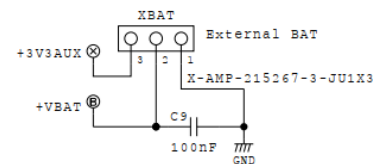


12) NVMRO

If Jumper BR1 is closed NVRMO is set to memory writeable.

BR1

1	NVMRO
2	GND

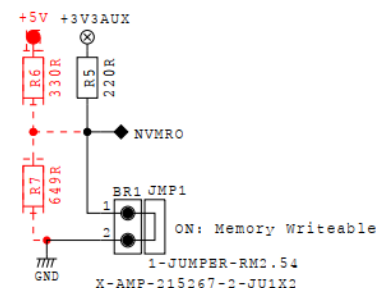

Germany

Hartmann Electronic GmbH
Phone: +49 711 13 98 90
Fax: +49 711 8 66 11 91
vertrieb.he@kontron.com
www.hartmann-electronic.com

USA

Kontron
Fabian Hemmann
Phone: +1 937-324-2420
Mobile: +1 937 346 7878
fabian.hemmann@us.kontron.com
www.hartmann-electronic.com

France

Kontron Modular Computers S.A.S.
Serge Pichat
Phone: +33 (0)9 66 44 03 15
Mobile: +33 (0)6 82 62 16 00
Serge.pichat@kontron.com
www.hartmann-electronic.com

India

Hartmann Electronic GmbH
Vivek Deshpande
Phone: +1 91 20 66 74 51 23
Vivek.Deshpande@kontron.com
www.hartmann-electronic.com